

3GS System

version 4



User Guide



EUROPLEX TECHNOLOGIES.

Company Web Site address: www.europlex.com

Europlex Technologies [Ireland] Ltd.

Clonshaugh Industrial Estate,
Clonshaugh, Dublin 17, Ireland.

Tel: +353 - 1 - 8485111

Fax: +353 - 1 - 8485161

e-mail: info@europlex.ie

Europlex Technologies [UK] Ltd.

Unit 11, Malmesbury Business Park,
Malmesbury SN16 9JU, Wiltshire, England.

Tel: 01666 825430 Fax: 01666 824423

e-mail: europlex_uk@msn.com

Europlex Technologies [USA] Ltd.

Suite 106, 1700 Enterprise Way, SE
Marietta, GA 30067, USA

Tel: 770 - 426 - 9787.

Fax 770 - 426 - 9790

e-mail: sales@europlex.com

Europlex Technologies [Canada] Inc.

Unit 6, 70 Dynamic Drive, Scarborough,
Ontario, M1V 2N2, Canada.

e-mail: aplex@interlog.com

WARNING

While this system is an advanced design integrated security system, it does not offer guaranteed protection against burglary, fire or other emergency. Any alarm system, whether commercial or domestic, is subject to compromise or failure to warn for a variety of reasons.

Therefore, good installation practices, thorough testing and regular maintenance by the installing company and frequent testing by the user are essential to ensure continuous satisfactory operation of the system. It is recommended that the installation company offer a maintenance program and instruct the user with the correct procedure for use and testing of the system.

Copyright

Europlex Technologies [Ireland] Ltd (hereby referred to as Europlex) 1999. All rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language in any form or by any means electronic, mechanical, magnetic, optical, chemical, manual or otherwise without the prior written permission of Europlex.

Disclaimer

Europlex make no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Further Europlex reserve the right to revise this publication and to make changes from time to time in the contents hereof without the obligation of Europlex to notify any person of any such revision.

3GS Version 4.00: *3GS User Guide* - Issue 01 - 1999. Manual Code 6083. June 1999.

Contents

Introduction	5
3GS System Keypad/Display	6
Menu options	7
Navigating the Help Menu via the Keypad	8
Unset/Reset	9
Accept All Alerts	10
Part Set	11
Half Set	12
Full Set	13
Unable to Set	14
Setting Individual Areas	15
Coded Reset	16
Set Date & Time	17
Change your own ID	18
User Setup	19
Area Setup	22
System Log	23
Hour Adjust	24
Inhibit Mode	25
User Option Assignments	26
Typing Text	27
Index	28




Introduction

This manual is intended as a quick reference User Guide for the 3GS System.

The 3GS is a combined security, radio alarm, and access control system. It controls up to 200 alarm zones, divided into 8 separate areas, as well as as 64 doors/128 card readers.

User Menu

The User Menu, by which the user programs the system, is accessed via the keypad by keying in your User Code plus the option key Help:

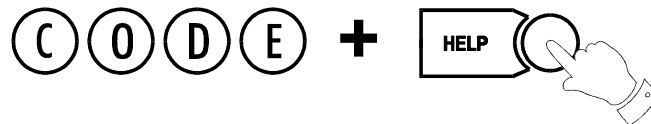

This will allow you to choose one of the menu options available.

Display

The 3GS system has a two line by 24 character LCD display e.g.

UNSET / RESET?
code + unset

When you are navigating through the Help menu:

- The first line shows the option
- The second line shows how to directly select the option without using the Help function.

Alert Messages

When in normal operation, the system will display the day, date and time on the first line of the display. The second line will flash any recent system events or information (such as a fault with one of the fuses or battery, or an alarm condition).


If the condition continues, e.g. Battery Problem, the message displays steadily instead of flashing. This message will continue to display until you remove the message (See Accept All Alerts on page 10).

If the system is in Full Set mode (see Full Set on page 13), the message will display steadily and the buzzer will also sound.

Pressing the  key will give information on the areas/zones affected.

Keypad Private Mode

The 3GS is designed to allow only one user at a time to operate the system.

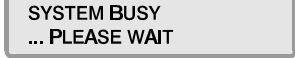If the display shows:  when you attempt to use the keypad, this means that a user is operating the system at another keypad. Wait until the system is free before attempting to use the keypad again.

Year 2000


All 3GS systems are Year 2000-compliant.

Alarm Duress Code

3GS has an in-built Alarm Duress Code feature, which allow you to trigger a silent Duress alarm by simply keying in the first 3 digits of your code, and then the fourth digit plus 1. For example, if your code is 1234, then by keying in 1235 you will trigger a Duress alarm, which will not display on the panel and will not sound an alarm, but will send a trigger directly to your central security station.



3GS System Keypad/Display

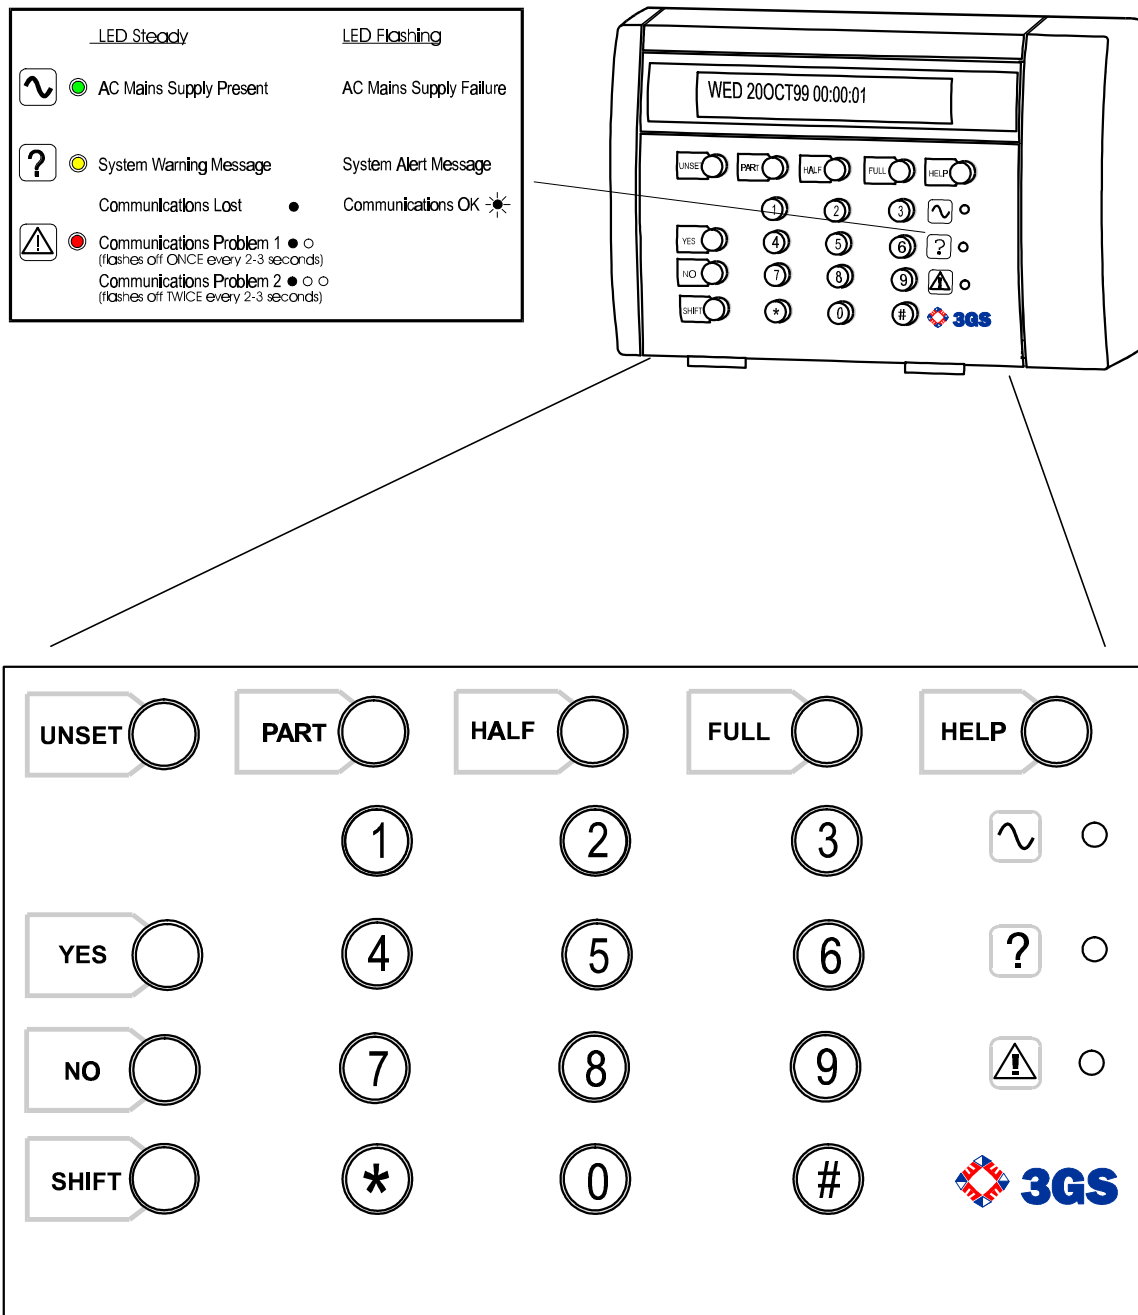


Menu options

The system is programmed using the Help menu options:

In sequence, as a Master User you can use these menus to :


- Disarm the system and reset all warning devices
- Remove system display messages and silence the buzzer
- Part set the system
- Half set the system
- Full set the system
- Reset the system following an alarm
- Set the system date and time
- Change existing user codes
- Set up new users
- Set up a new area system
- View system log
- Adjust the system for summer / winter hour change (Daylight Saving Time)
- Isolate a troublesome zone that is preventing the system from arming

 **The advanced options Radio PA Assign, Radio PA Test, Setup Cards, Card Information, and Manual Door Control are described elsewhere in the 3GS Programming and System Integration manuals. See your installer for details.**

 All of these options are accessed by pressing the CODE followed by the HELP key.

By default, the MASTER USER CODE is 1020. The system installer may have configured your own unique CODE, in which case this should be entered instead of the default (1020) code.


An option is selected by pressing the YES key



 
Use the UNSET key to move to the next option





Use the PART key to move back

 


To exit without selecting an option, use the NO key




 **Only options which have been assigned to a user are displayed. The Master user will have all options.**

The hash button  acts as an ENTER key for the keypad.

Once the help routine is entered a selection must be made within 90 seconds, otherwise the system will exit from this menu.

 **It is advisable to assign only the minimum number of system options to general users, to facilitate ease of use of the system.**

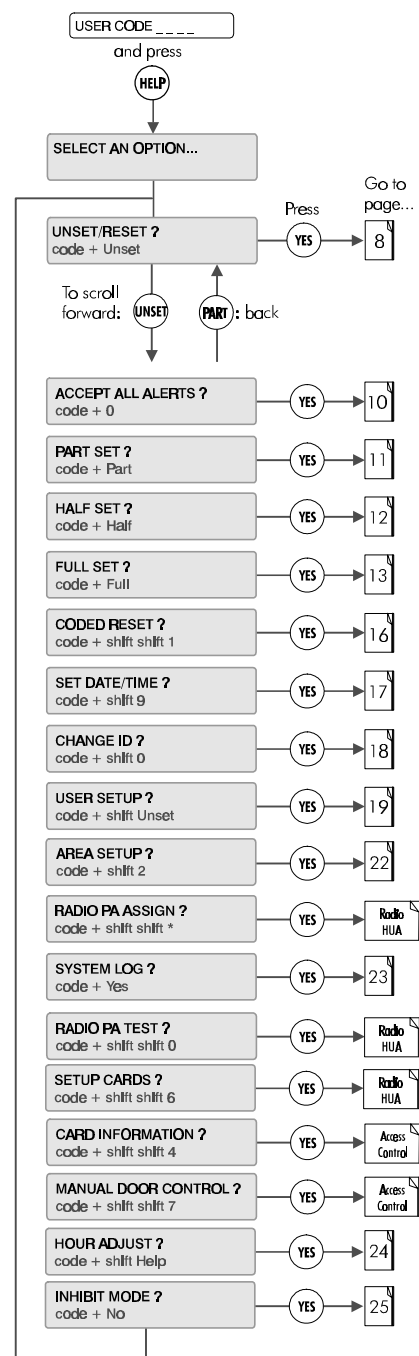

Navigating the Help Menu via the Keypad

To navigate the Help menu options use the UNSET, PART, YES, NO, (#) keys.

Their functions are explained below with typical examples.

Help Menu

The first option in the **Help Menu** is shown:



The following keys are used for **help menu** navigation and selection:

- (UNSET) To move **forward** through menu options.
- (PART) To move **back** through menu options.
- (YES) To **select** an option.
- (NO) To **exit** the menu.

Moving through Options

After changing a number, press (#) to move forward.

When viewing options that do not require input:

- (UNSET) To move **forward**.
- (PART) To move **back**.

Answering a question

On the following display, the flashing "?" implies that the system is waiting for an answer:

 


Press (YES) or (NO) as required.

Pressing any key other than (YES) will be interpreted as NO.

Yes / No Options

If an option is presented with YES or NO displayed underneath, select as follows:



- (YES) To select **Yes**.
- (NO) To select **No**.

The system will automatically move to the next option.

When complete press (#) to accept **all** data input.

Entering Numbers

There are two methods of entering numbers. Both methods can be used as is shown for the "Set Minute" example below. A flashing digit will prompt entry:



Key in digits directly

The more **direct** method is to key in the **digits** as shown,

E.g. : (2) (0) followed by (#)

If you make a mistake (before pressing #) :

Correction can be carried out using : (*) to move back and

(YES) to move forward.


Then re-enter the correct **digits** followed by: (#)

Three way display options

Certain displays will present three flashing sub-options. Sub-option selection is determined by **position** on the display:

- Option **left** = UNSET key on the extreme left.
- Option **right** = HELP key on the extreme right.
- Option **centre** = HALF key in the centre.

The options shown below display when you select 'Setup Cards ?':

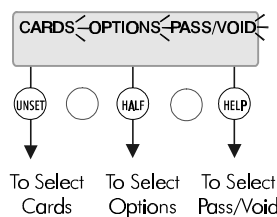

Unset/Reset



Select the **Unset/Reset** option to disarm the system when you enter the premises, or to cancel alarms, bells etc. after an alarm activation.

This will put the 3GS into Unset mode (i.e. normal daytime operation). The system alarm outputs (buzzers etc.) which had been activated are reset to normal.

After an Alarm Activation

After an alarm activation proceed directly to the control panel enter the code and press Unset.

The display will show:

WAIT.....

Followed by:

UNSET

followed by the cause of the alarm, i.e. which zone has been opened.

Example:

Alarm alert message:

WED 20OCT99 09:00:00
***** ALARM *****

Zone alert message:

WED 20OCT99 09:00:00
OFFICE DOOR

These messages will be flashing.

To clear flashing (Alert) messages key in your code plus 0 (see "Accept All Alerts" on page 10.)

Enter the premises via the correct entry route.
The entry buzzer will sound.

Display will be blank :

Key in

USER CODE _ _ _ _ (UNSET)

USER CODE ????

WAIT...


UNSET

System goes into Standby mode and display shows:

FRI 01OCT99 15:15:20



Accept All Alerts

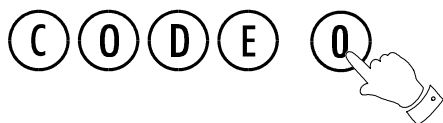


Alert messages are **flashing** messages displayed to alert the user that a particular condition exists/existed on the system.

Accepting the alert will remove the message and silence the buzzer. When the Alert accept option is selected, all alert messages which are currently displayed are accepted (removed).


If the condition that caused the alert message still exists, a steady warning message will remain on the display and the yellow LED will remain lit until the condition indicated no longer exists.

The ALERT ACCEPT option is logged, along with the identity of the user.

To accept (remove) the alert message (s) enter the following:

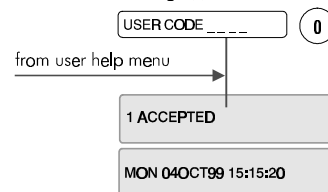

Any number of alert messages may be accepted using this method, eg:

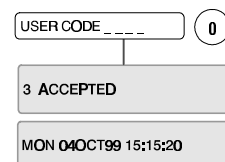

Some examples of Alert Messages

MAINS POWER	Power Supply Unit mains voltage (220Vac) removed.
PSU FUSE BLOWN	Power Supply Unit "controller board" fuse blown.
BATTERY PROBLEM	Back up battery supply removed / interrupted.
ID SECURITY ALERT	Invalid ID code entered (3 attempts).
TIME ADVANCE	Time advance option selected.
ZONE TAMPER ALARM	Zone tamper circuit activated.
*** PANIC ALARM ***	Panic Alarm activated.
***** ALARM *****	Normal Alarm activation.
SOAK ZONE TRIPPED	Soak Zone Activation.
*** FIRE ! ***	Fire Zone Activation.
+++ CALL SERVICE +++	"Engineer Reset" required. System can not be FULL set until reset variable is set to 1.
*** DURESS ALARM ***	Duress option selected.
FIRE DOOR OPENED	24-Zone "Fire X" opened.
ENTRY TIME-OUT	System "Unset" was not selected before entry time expired.
CALL NOT ANSWERED	DM1200 digital communicator dialled programmed number - no reply.
TEL. DATA ERROR	Communications transmission unsuccessful.
CANCEL HOUR CHANGE	Hour change option selected and then re-selected to cancel.
STACK ERROR	System software error.
LOG CORRUPTED !	System log corrupted.
RAM FILE CORRUPTED !	RAM data corrupted.
BACK TAMPER	Control Panel back tamper switch open.
LID TAMPER	Node lid tamper switch open.
NODE LOST	No communications on node comm. ports 1 (IN) or 2 (OUT).
COMM PORT 1 OFF	No communications on node comm. port 1 (IN).
COMM PORT 2 OFF	No communications on node comm. port 2 (OUT).
NODE RESET	Node PROM has been reset - Inputs / Outputs must be reprogrammed.
IR ACTIVE	Communications between node Infra-red port and Hand-Held Terminal.
MEMORY ERROR	Node PROM data corruption.
POWER LOW	Node supply voltage below 9.9vdc.
FUSE BLOWN	Node fuse blown.
AUX OVERCURRENT	The auxiliary current drawn from the node has exceeded 2Amp limit.
BHO TAMPER	Bell Hold Off tamper activated.
PSU FAIL	PSU failure -return to supplier
PSU OVERCURRENT	Current drawn from PSU has exceeded the programmed limit
SERIAL PORT FUSE BLOWN	Controller serial port fuse blown.
NODES x -> x DUPLICATE SER#	Node serial number duplicated - return node to supplier.
CABLE FAULT	Cable fault on ringnet.

Part Set



Your system will be set up as either:

- standard alarm with one alarm area,
- or 8-area, with 8 separate alarm areas within one system.

A standard alarm system is set using the **Part**, **Half**, and **Full** procedures.

The **Part** and **Half** options are disabled for the 8-Area system. Instead, the different areas within the system are set and unset independently of each other, as described on page 15.

Part Set

With a standard alarm system, you can isolate particular areas of the premises and set these areas independently of the rest of the system.

Part Set allows you to protect the perimeter of a premises while allowing free movement through the exit and access area (e.g. from door, hall).

This would typically apply to the day or evening operation of the system when people are on the premises and using the common exit. There is free access to the areas being used while the rest of the building is armed.

There are no entry or exit times associated with this mode and protection is applied instantly.


The display remains blank and will only change to show alert and warning messages.

If selected while entering the building while the entry timer is running, the entry mode is cancelled and the buzzer is silenced.

- If selected by mistake refer to “Unset/Reset” on page 9.
- If unable to set refer to “Unable to Set” on page 14.



Please ensure that you have been properly instructed in the setting and unsetting of your system.

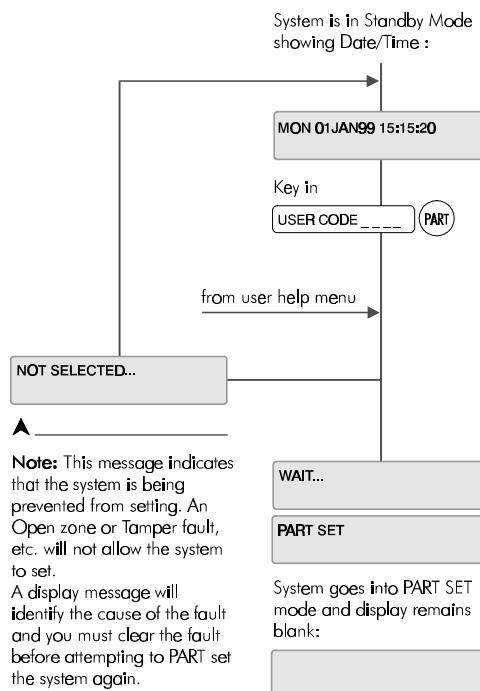

Half Set




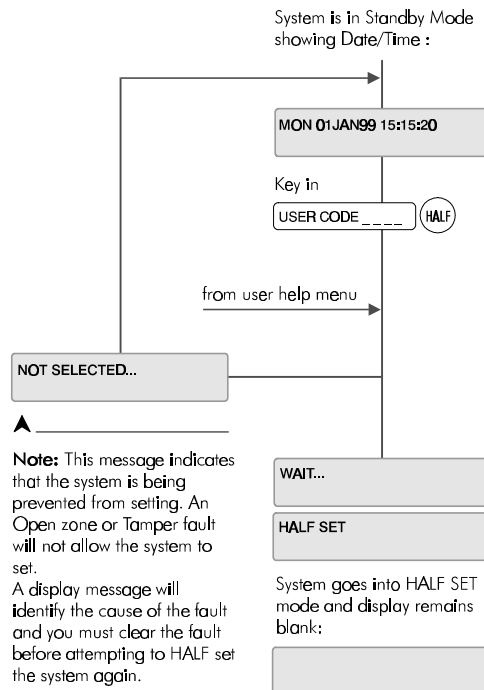
HALF Set is used to provide full perimeter protection (including exits) when people are on the premises and all exits are locked, i.e. night time operation.

This mode immediately arms the perimeter and the Exit zones.


If selected when entering the building, the entry mode is cancelled and the buzzer is silenced.

- If selected by mistake refer to “Unset/Reset” on page 9.
- If unable to set refer to “Unable to Set” on page 14.

 **Please ensure that you have been properly instructed in the setting and unsetting of your system.**



 Full Set



This option will set the entire system. Ensure that all zones (doors, windows, etc.) which are not on the exit/entry route are closed.

Exit Sequence

Enter your user code and press FULL. Leave via the exit route. The buzzer will stop at the end of the exit time and the system will fully set.

The buzzer will sound during the exit routine. At the end of the exit time, if all zones are closed, the buzzer will stop. The system will then become Fully Set if :

1. the exit time expires, or
2. the 'exit terminator' button is pressed.

If a zone is still open, the system will wait indefinitely for a clear condition, then set when the zone is closed.

During the exit period the buzzer will sound with one of two possible tones, a long beep indicates that all zones are closed and that the system will set correctly when the exit time expires; a short beep indicates that one or more zones are open and the system will not SET until all these zones have closed.

Multi-Area system configuration

In a multi-area system, Full Set has the effect of setting all areas plus the Common Area.

Alarm on exit


If the user strays from the exit route a local alarm will be generated, tripping internal/external bells.

Action to take:

- Return to control panel;
- Select 'UNSET' (see "After an Alarm Activation" on page 9).
- Remove alert messages (see "Accept All Alerts" on page 10).
- Reselect "Full Set" and exit the premises.


Entry Sequence

When you enter the building, the system will be Fully Set. The entry buzzer sounds and the entry timer begins. This gives you a specific number of seconds in which to go to the keypad and Unset the system. Otherwise a full alarm is generated along with the alert message "CODE ENTRY TIMEOUT". In this case repeat the Unset procedure to silence the alarm.

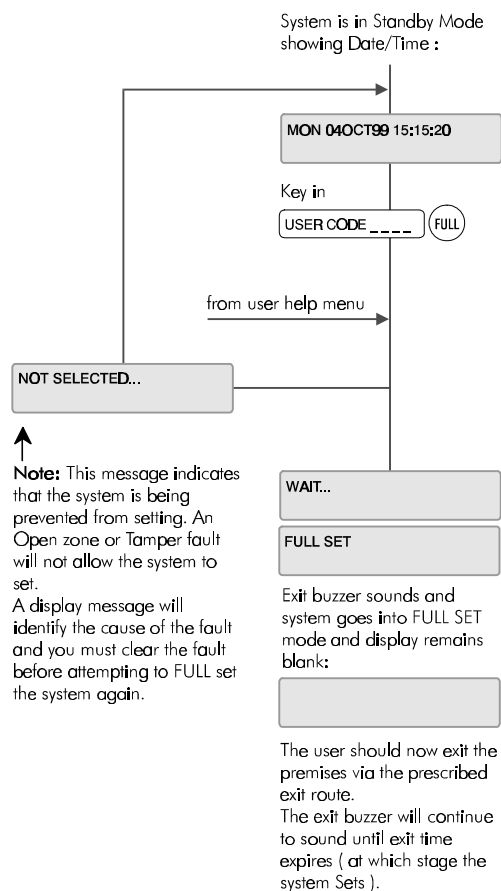

To abort FULL set

To abort a Full set during the exit routine return to the keypad and proceed as follows:

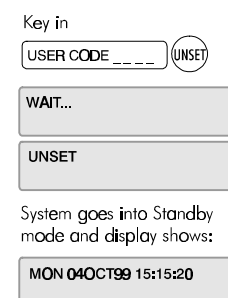

Unable to Set

If attempts to Part, Half or Full Set the system fail, the system buzzer briefly sounds and the display briefly shows:

NOT SELECTED

This is normally due to open zones or doors.

The system will display which zones are open.

For example:

WED 20OCT99 17:45:00
OFFICE DOOR

 
Action to take:

- Go to the Area concerned and close the zone(s).
- Return to the control panel and reselect the required 'set' mode.
- Leave via the exit route.


The system buzzer will stop when:

1. The Exit time expires or
2. When the 'exit terminator' button is pressed (if fitted).

Setting Individual Areas



In an 8-Area system, the whole premises is divided into up to 8 separate alarm areas, which may be set and unset independently of each other.

 **To set or unset an area you must be assigned the right by the Master User.**

To set an area, key in your code plus the Area number.

For example, to set area 6, key in:

Area 6 will now set.

Common Area


The Multi-Area system consists of up to 8 Alarm areas plus a Common Area (usually the entrance/exit lobby or front door).

The Common Area sets and unsets automatically:

- When all the other areas are set, the Common Area automatically sets.
- When one area is unset, the Common Area automatically unsets.

Areas and Full Set

The Full Set option (see page 13) operates in an area system in the same way as in a standard alarm system. Keying in your code plus FULL will arm all areas plus the Common area and begin the exit timer.

 **To Full Set the system (all areas) you must be assigned the option by the Master User or installer.**

Reset Area? Message

The system may be configured to display a 'Reset Area' message when you attempt to set an area. This has the effect of clearing any remaining alert messages. Press **YES** to this prompt. The display will then show 'Set Area ?' again. Press **YES** again to set the area.

Unsetting an Area

Keying in your code plus the area number will set the area (if it is unset) or unset the area (if it is set).

When you unset one area, the Common Area automatically unsets, giving access to and from the Common Area.

To set, say, Area 6, key in your user code:

USER CODE ____
and press

If Area 6 was previously unset, it will now set, and vice versa

The display will show:

WAIT ...

followed by:

AREA 6 SET

The exit timer for this area begins and the display returns to normal



USER CODE ____

and press

If Area 6 was previously set, it will now unset, and vice versa

WAIT ...

AREA 6 UNSET

Coded Reset

Under normal conditions, the system can only be re-armed after an alarm activation by a service/installation company visit.

The display will show a CALL SERVICE message and the user will not be able to re-arm the system.

When enabled, the Coded Reset option allows you to re-arm the system, avoiding the need to call an installer to the site.

When you have acknowledged an alarm, the keypad will continue to display the message:

+++ CALL SERVICE +++

If you attempt to re-arm the system, the keypad will beep, and then briefly display the message:

NOT SELECTED

You should now contact the Security Control Station for a release code. If the Security Control Station is unable to give you a release code, contact your installer.

User Reset Procedure



Select Coded Reset.

The display will show a random 4-digit number.

Contact the Control Security Station with this random number.

The Central Station operator then converts this number to a 4-digit return code acceptable to the system.

CODED RESET

RANDOM CODE IS 2456

When you receive your return code from the Central Station operator, return to the keypad, and press the

key.

The display will prompt you to enter the return code:

ENTER CODE 0
RANDOM CODE IS 2456

Key it in at the prompt. If the code is incorrect, the display will show:

+++ INVALID ENTRY +++

When you have keyed in the correct code, the display will show:

CODE ACCEPTED

You can now re-arm the system by selecting Full Set (see page 13).


 **All users who have the FULL SET option will automatically be assigned the Coded Reset option. See User Setup on page 19.**

Set Date & Time



The time is set in 24-hour clock notation.

To adjust the time for the Summer/Winter hour change (Daylight Saving Time), see the "Hour Adjust" option in the User Options.

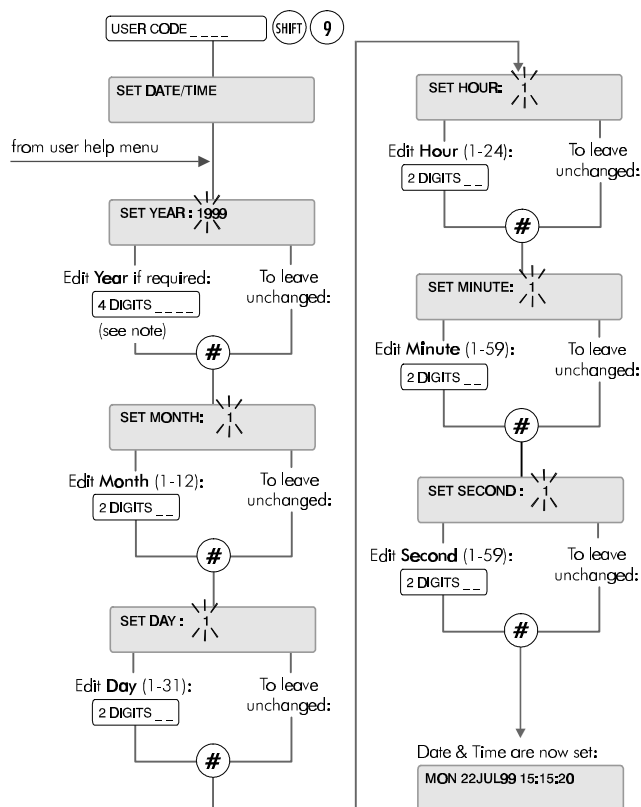

Note: There are **two** methods of editing the display digits:

1	Key in digits
To backspace : (*) To move forward : (YES)	
2	Scroll through digits
To increment digits : (INCR) To decrement digits : (DECR)	



Change your own ID



This option allows the user to change the ID code normally assigned to them by the Master User.


When the option is selected, the user is prompted to enter a new 4-digit code. To avoid duplicate codes, a second choice of code is requested.

Once both codes have been entered the system will either reject or accept the user's choice. If rejected the user must repeat the procedure and enter two new codes. If accepted, the system will assign one of them (chosen at random) and will indicate which code is to be used.


This option is cancelled after use so **each user has only one opportunity** to change their own code. The Master user may, of course, grant the option again if required. Once chosen the code is completely private.

Remember the two codes you have entered! The one chosen by the system as your new code will be indicated by either '1' or '2'.

Once changed, test your code to ensure that the system has accepted it. In not, consult your Master User or installer.

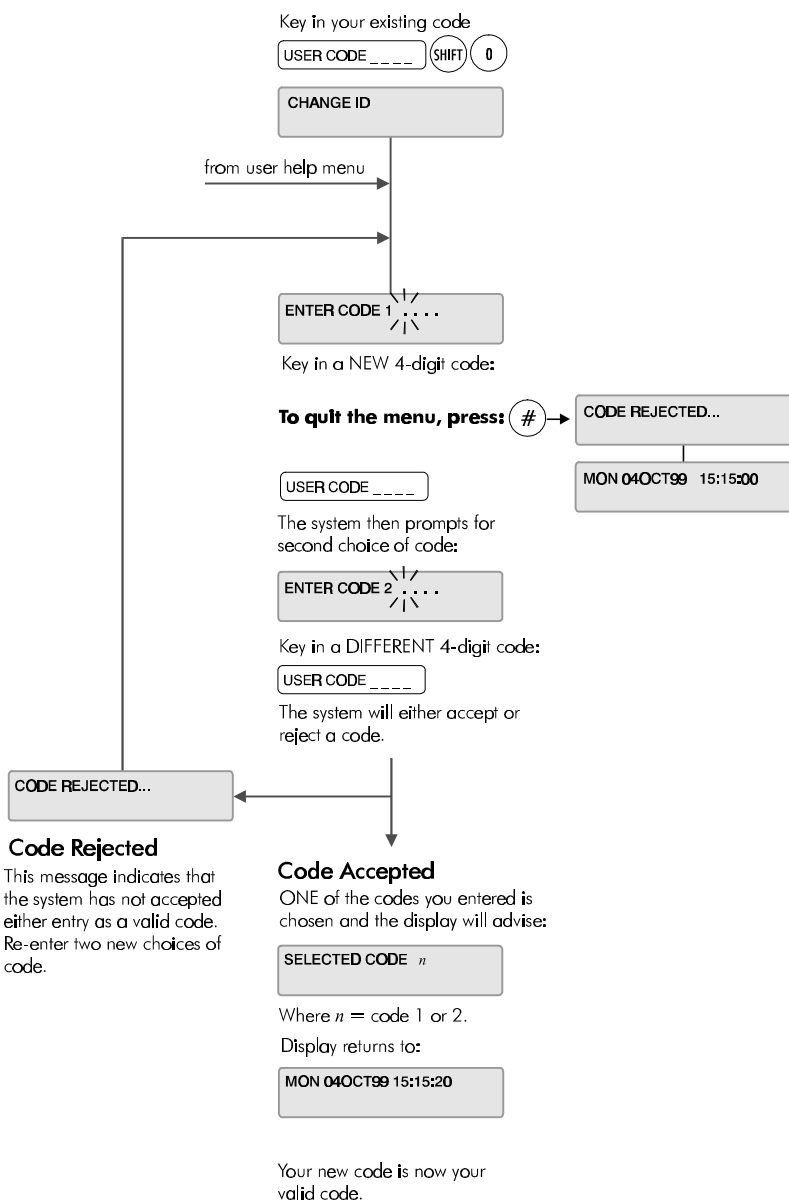

User Setup

 

Changing User ID Codes (by the Master User)

This option allows the Master User (user 2) to change individual ID codes.

Display shows: USER SETUP

Followed by: ID.S OPTIONS NAMES

To select ID.s press: UNSET

Display shows: ENTER USER NO. 3

Type the number of the user whose ID is to be changed.

Example:

To change user number 4 press: 4 #

Display shows:

USER CODE ...

Type user four digit code: NEW CODE ____ #

Display shows: ENTER USER NO. nnn

(where 'nnn' is next user). Type in next number or to exit: NO

 **When entering a user ID code, the display will show asterisks instead of digits.**

To exit options menu: NO To print User Info: YES or to exit: NO



Changing User Options:


To change user options enter:

Display shows:

Followed by:

To Select Options:

Display shows:

 **Installer (User 1) and Master User (User 2) are factory defaults. Users 3 to 126 are general system users.**

Example:

To change options of user number 4:

Display shows:

The system will display each option.

To assign the displayed option to the user press:

To deny the displayed option to the user:


When display shows: (where 'nnn' is the next user)


Type in next user number or to exit press:

To exit options menu press:

To print user info. press: or to exit press:



User Names:

Display shows: 

To select names press: 


Display shows: 

Example:


To change / enter the name of user 4 press:  




Display shows:  

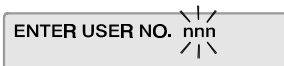Refer to page for instruction on typing text.

After scrolling through the list of available options the display will show: 

(where 'nnn' is the next user)

Type in next user number or to exit press: 


To exit options menu press:  To print user info. press:  or to exit press: 




When entering or changing a user ID code, the display will show asterisks instead of digits.



Area Setup

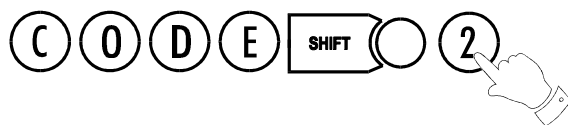

The Area Setup menu allows the Master User to assign setting rights for different areas to different users. See Setting Areas on page 14.

 **The number of areas to be active in the system is configured by the installer.**

 

Setup areas ?

The system allows for 8 blocks or areas by default. Individual installations may require less, and the installer customises the number of blocks needed.

Use this menu to select individual users and assign/deny setting rights to each of the areas within in the system in turn.


 **The Full, Part, and Half Set options do not function in an 8-area system.**

For setting individual areas, or the complete system (all areas), see page 15.

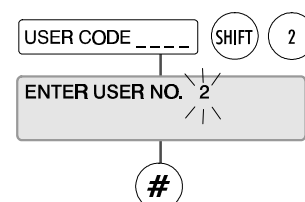


The **YES** **NO** keys will

 allow/deny this user rights to this area. The display then scrolls through each of the areas configured for the installation



 Pressing **#** will return the user to the user number prompt.



Press **NO** to quit.

System Log



The 3GS alarm log is a record of all system activity (keypad input, status alerts, alarm activations etc.) and this may be viewed or printed if a hard-copy is required. The detail and length of the log provides an invaluable record of the system operation for both fault finding and alarm analysis.

The alarm log is 1000 events long (the Access Log is 3000 events) and each event is detailed with exact date and time to the nearest second. System events are displayed chronologically with the most recent events appearing first.

The alarm log gives 4 details for each event, which appear on the display in sequence:

- the date and time of the event;
- the user name or zone number (e.g. Master User);
- the user number or zone description (e.g. User 2 Selected);
- and the action taken (e.g. System Log)

Alarm and Access Logs

3GS gives 2 types of log: the standard **Alarm Log**, which displays all the system events (as described here); and the **Access Log**, which displays only Access Control-related events, such as Invalid Card Entry, Door Forced, and Time Zone Setup. The Access Log should be viewed using 3GS+.


Printing the Alarm and Access Logs

When the option "PRINT LOG ?" is displayed, if a serial printer is connected and the serial port correctly configured, a print-out of the log can be generated by selecting the YES key. Otherwise, any other key should be pressed and the log will be displayed.


Viewing the Alarm and Access Logs

The log display can be stepped through quickly one line at a time by pressing the **#** key. The "*" appears in the centre of the date & time display to make the log easily differentiable from the Standby/Unset mode display. The date and time remain visible in the display until all information regarding that particular event has been shown. The PART SET key will 'rewind' one entry at a time to the first entry of the date currently being displayed, the UNSET key will skip to the next entry.

To leave the system log at any point in the record, press the NO key.

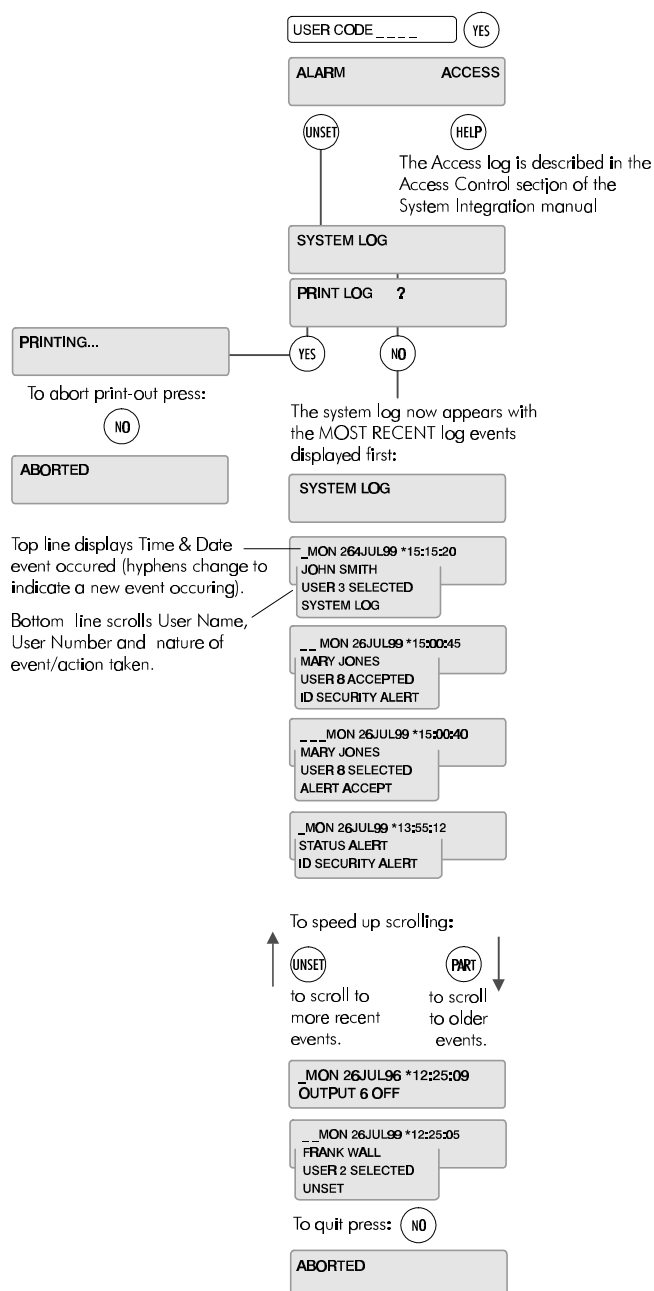

Hour Adjust

 

This option adjusts the system clock to automatically take account of the Summer / Winter time change (Daylight Saving Time).

It must be selected during the week prior to the Sunday on which the hour change is to occur at 2.00am.

A warning message is displayed until the function is executed - "Hour Change Sunday".


The system will automatically set the hour forward or back as appropriate on the Sunday morning.

The option toggles on and off – if you selected it in error, you cancel the hour change by selecting it again.



Hour Adjust should only be selected during March/April and October.


Hour Adjust is only available in March, April and October.

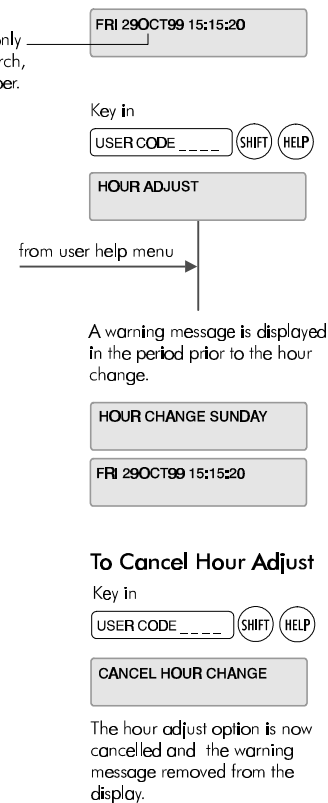

Inhibit Mode



This option is used for temporarily isolating troublesome zones (doors, windows, movement detectors, etc.) which may be preventing the system from setting. Zones/doors may be inhibited singly or in blocks.


 **The problem zone/door will be indicated on the display, e.g. Zone 3 Tamper, Door 4 Open. Inhibit Mode provides two identical sub-menus, for zones and doors. Use the appropriate sub-menu to implement the inhibit.**

If zones/doors have been inhibited, on selection of FULL set mode, a message will indicate how many are inhibited.

Selection of this option is logged by the system and an asterisk appears beside the log entry to indicate the zone has been inhibited manually (zone may also be inhibited via literal commands). The identity of the user to select the option is also logged.

Operation

Having entered the user CODE and then pressed the NO key, the display will read "INHIBIT FROM 1". Enter the number of the first zone to be

inhibited followed by . The next displayed message is "INHIBIT TO 1".

Enter the number of the last zone in the block to be inhibited. This will be the same as the first zone if only one zone is required. After the second parameter has been entered the display will show "n INHIBITS" where n is the number of zones/doors inhibited) and the buzzer will sound briefly before returning to UNSET mode displaying the date and time.


The INHIBIT function can be re-entered any number of times to inhibit more zones/doors, existing inhibited zones/doors will not be affected.

Clear Inhibits


To clear inhibits, re-enter Inhibit Mode using the engineer code followed by the NO key. The message "CLEAR ALL INHIBITS ?" will appear in the display. Press YES to clear the inhibited zones. Press NO to inhibit more zones or to view those zones which are already inhibited.

Unset/Reset

When the system is unset after a full set (i.e. the next day), zone inhibits are automatically removed.

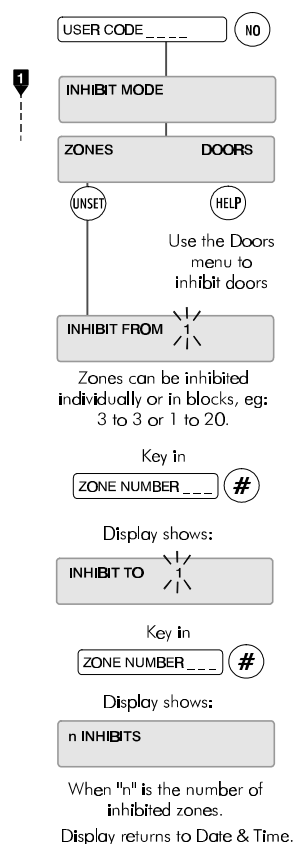

To Clear Inhibits

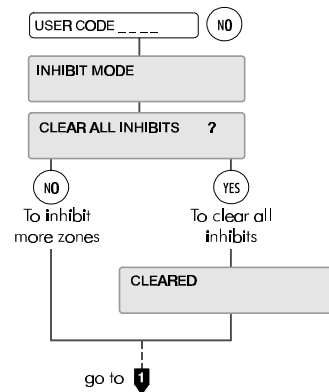


User Option Assignments

Use this table to record the options that have been assigned to the system users.

[illegible]

Typing Text

This is a function normally carried out by the 3GS Installer. Ensure your 3GS system is configured with full text descriptions for all alarm zones, areas, alarm users and access card holders before it is handed over.

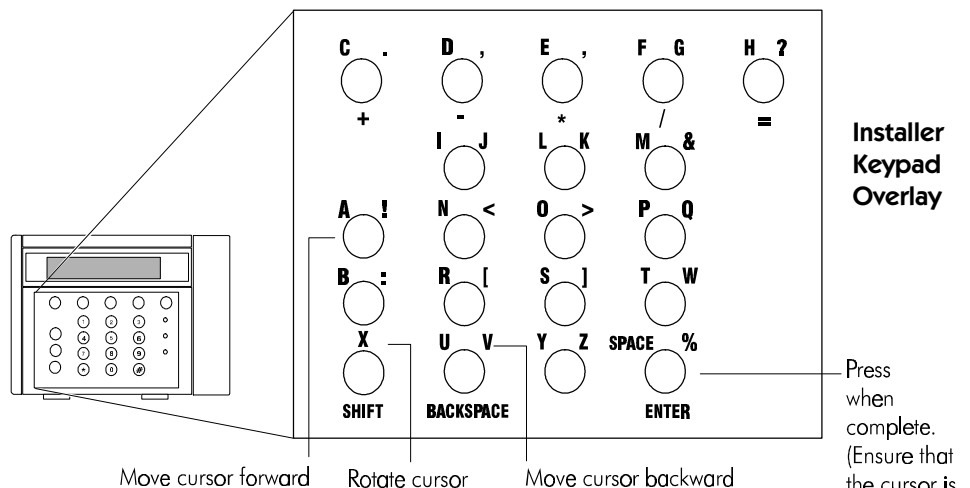

The cursor will be in character position 1, i.e.: **Λ**

Locate the character you wish to enter.

Example: ^LⒶ^K Most keys will have three characters when in typing mode. The orientation of the cursor governs which character is selected.

Λ will select "2". **<** will select "L". **>** will select "K".

To delete characters


F R A N N N K Λ

With the cursor in position 1, use the **⊙** key to move the cursor back over the characters.

F R A N N N K

When the cursor is over the character to delete, hold the **SHIFT** key down. The keypad beeps as it deletes characters to the right.

With the cursor in the **Λ** character position, press **#** to complete text entry.

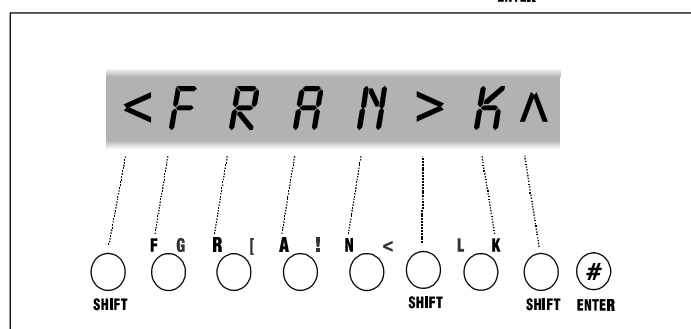

Index

Numerics

3GS + Software 27

A

Accept All Alerts 9, 10

Access log 23

Alarm log 23

Alarm on exit 13

Alert messages 5, 10

Area

Common 15

Reset message 15

unsetting 15

Area Setup 22

Areas

setting 15

Assigning user options 26

C

Call Service display 16

Change ID 18

Changing user options 20

Clearing zone inhibits 25

Coded Reset 16

Common Area 15

D

Default codes 7

E

Entry sequence 13

Exit sequence 13

F

Full Set 13

H

Half Set 12

Help menu 7

Hour Adjust 24

I

ID codes 19

Inhibit mode 25

K

Keypad 6

L

LCD display 5

LED functions 6

Log, system 23

M

Menu time-out 7

N

Navigating menus 8

Not Selected 13

P

Part Set 11

Printing the Log 23

Printing the log 23

S

Set Date&Time 17

Setting areas 15

Setting ID codes 19

Setting the system 13

Standard v. 8-Area system 11

Summer/Winter hour change 24

System Log 23

T

Text entry 27

Typing text 27

U

Unable to set 14

Unset/Reset 9

Unsetting an area 15

Unsetting the system 9

User ID codes 19

User names 21

User option assignments 26

User options 20

User reset procedure 16

User Setup 19

V

Viewing the log 23

Y

Year 2000 5, 17

Z

Zone inhibit 25